
R23 metal staple gun

Operating instructions and safety information

Manual staple gun for fastening suitable fabrics and thin leather coverings to suitable wooden substrates. For upholstery, decoration and craft work.

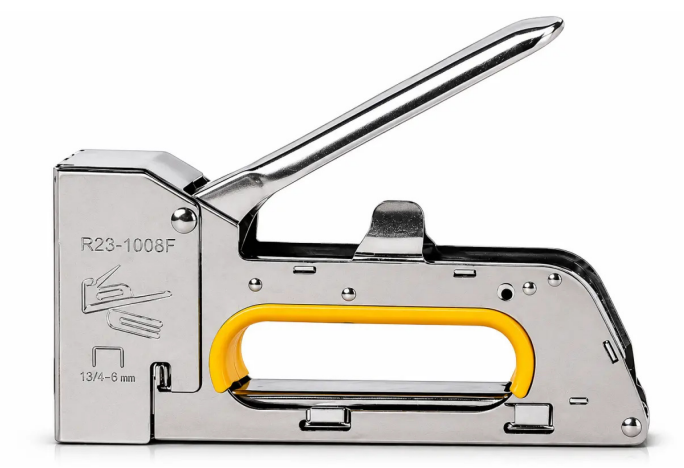

Product identification

Item no.

10501

Model / manufacturer item no.

R23

GTIN / EAN

4260606875211

Contents: 1 staple gun


Dimensions (L × W × H): 17,5 × 2,5 × 8 cm · Item weight: 453 g

Original shop image: The marking “13/4-6 mm” in the photo is incorrect. Leg lengths of 4, 6 and 8 mm are confirmed for item 10501.

Suitable staples

Leg length	Miles	REGUR
4 mm	TR 13/4	37/04
6 mm	TR 13/6	37/06
8 mm	TR 13/8	37/08

The table lists compatible staples; it is not a list of items supplied. Use only suitable, undamaged staple strips.

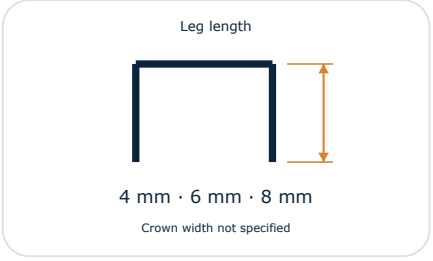

Choose a suitable staple length

Take the material thickness and wooden substrate into account. Insert a test staple first. The points must not protrude through the back.

1 Safety information

WARNING - Injury from discharged staples

Never point the staple gun at people or animals. Keep hands and fingers away from the staple outlet. Operate the lever only when the nose rests firmly on a suitable workpiece.

CAUTION - Protect eyes and hands

Wear safety glasses when stapling and removing jammed staples. Keep bystanders away. Do not look into the outlet. Keep fingers out of the gap between the lever and housing.

WARNING - Do not fasten cables

Do not use this staple gun to fasten electrical wires or cables. Before stapling, check that there are no concealed cables, pipes or other sensitive components in the working area.

CAUTION - Support the workpiece securely

Secure the workpiece against slipping on a firm surface. Never staple on your body or while holding the workpiece in your hand. Keep your free hand to the side of the nose and never underneath the stapling point.

NOTICE - Loading, unloading and faults

Do not operate the hand lever while loading, unloading or opening the magazine. Move spring-loaded parts in a controlled manner. Remove loose staples from the magazine before cleaning or clearing faults.

NOTICE - Suitable materials and safe storage

Use only the staples listed on page 1. Do not staple into metal, glass, stone or concrete. Do not use defective devices. Store the staple gun unloaded, dry and out of the reach of children. Not a toy.

Read the instructions before use, keep them and pass them on with the product. A staple may remain in the outlet area even when the magazine is empty.

2 Loading and safe stapling

The drawings are schematic and show orientation and the result to check.


A · Fill the bottom-loading magazine

1. Hold safely. Keep pressure off the hand lever. Hold the staple gun away from your body and turn it to access the bottom-loading magazine.

2. Open the magazine. Release the magazine catch at the rear and move the magazine slider backwards in a controlled manner. Do not press the hand lever.

3. Insert staples. Insert a suitable strip. Point the legs towards the underside; with the staple gun upside down, they point up. Do not mix lengths.

4. Close the magazine. Return the slider fully and lock it. If there is resistance, stop and check the staple position. Do not force it closed.

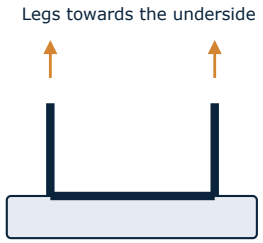

Staple gun upside down for loading

Schematic orientation


B · Insert a test staple and start work

1. Prepare. Support the material and wood firmly. Test a suitable length on an offcut of the same combination of materials.

2. Position. Place the nose flat and firmly on the workpiece. Keep your free hand out of the stapling area; never reach underneath the workpiece.

3. Staple. Press the hand lever fully in a controlled manner and let it return before repositioning. Do not staple at an angle or into the air.

4. Check. The staple crown should rest against the material without cutting it. Points must not protrude at the back. Continue only if the result is good.

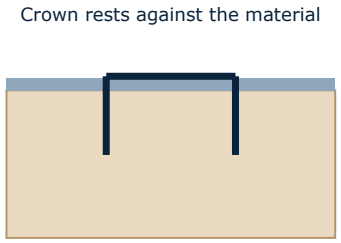

Points remain in the wood

NOTE - Do not use aids to increase force

Do not extend or strike the lever. Stop immediately if resistance is high.

3 Troubleshooting, care and contact

Clear staple jams safely

1. Stop work immediately and fully release pressure on the hand lever. Point the outlet away from yourself and others; wear safety glasses.
2. Open the magazine carefully and remove the staple strip and loose staples. Do not try to clear the jam by repeated firing.
3. Remove only freely accessible, loose staples with suitable pliers or tweezers. Do not reach into the outlet.
4. If a staple is stuck or the magazine cannot be opened safely: stop using the device and contact customer service. Do not dismantle the spring or striking mechanism.

If the stapling result is poor

Staple protrudes: check the material, wood and length; if necessary, test a shorter suitable staple on an offcut. Staples not feeding or bent staples: empty the magazine and check the staple type and correct seating. Discard damaged staples. Take the device out of service if the fault recurs.

Cleaning, storage and disposal

Unload before cleaning. Clean with a dry cloth and soft brush; protect from moisture. Store dry and out of the reach of children. Collect loose staples in a closed container. Dispose of metal parts and packaging in accordance with local collection requirements.

Manufacturer and distributor

Mario Goetz · oesen-de.de

Habichtstrasse 22 · 81827 München · Germany

Telephone +49 8121 999 9 771

info@oesen-de.de · www.oesen-de.de

For enquiries: quote item 10501 / model R23. Product in the shop · Contact